

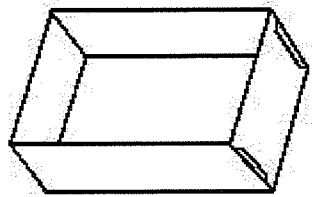


- 1. Lay Battic Door Flat - printed side down.
- 2. Fold one side up and turn end flaps in.
- 3. Repeat other side.

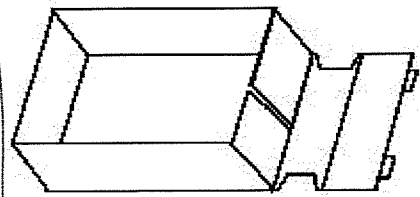

- 4. Fold one end up and over. Tuck tabs into slots.
  - 5. Repeat other side.
- Hint - push down to create sharp corners.

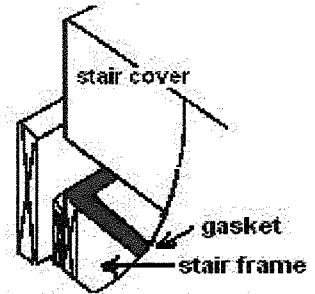

- 6. Install gasket onto stair frame.

### Quick and Easy Installation Instructions

**Step 1:** Fold the stair cover into shape. Self-locking tabs securely lock the ends of the cover into place.

**Step 2:** Clean the top of the folding attic stair frame and install the foam weatherstrip.

**To close:** Simply lower the stair cover onto the gasket as you leave the attic. The stair cover embeds itself into the gasket creating a tight seal stopping air leaks.

**To open:** Simply lift cover up and move out of the way.

**Tip:** Add insulation to maximize the benefits of your stair cover.